

DENON®

DNP-730AE

NETWORK AUDIO PLAYER

Quick Start Guide

Kurzanleitung / Guide de démarrage rapide / Guida di Avvio Rapido /
Guía de inicio rápido / Snelhandleiding / Snabbstartsguide /
Краткое руководство пользователя / Skrócona instrukcja obsługi

Read Me First....

Bitte zuerst lesen... / Lisez-moi en premier.... / Nota preliminare.... /
Lea esto primero.... / Lees mij eerst... / Läs detta först... /
Прочитайте в первую очередь... / Przeczytaj to najpierw....

ENGLISH

DEUTSCH

FRANÇAIS

ITALIANO

ESPAÑOL

NEDERLANDS

SVENSKA

РУССКИЙ

POLSKI

Welcome

Thank you for choosing a Denon network audio player. This guide provides step-by-step instructions for setting up your network audio player.







 



Please do not return this unit to the store – call for assistance.

If you need help... :


If you need additional help in solving problems, contact Denon customer service in your area. www.denon.com

Before You Begin


What's In the Box

| | | | |
|----------------------|---|---------------------|---|
| Quick Start Guide |  | Power cord |  |
| Owner's Manual |  | Audio cable |  |
| Safety Instructions |  | IR control cable |  |
| Notes on radio |  | Remote control unit |  |
| Network audio player |  | R03/AAA batteries |  |

Required for Basic connections

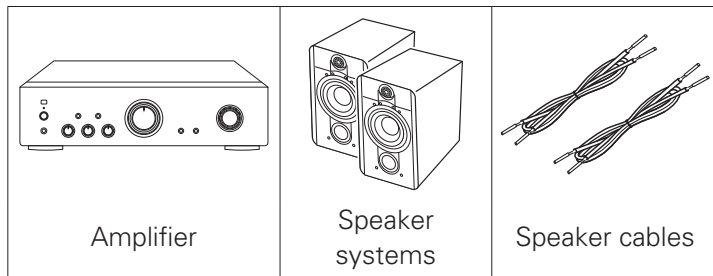

Required for Network connections

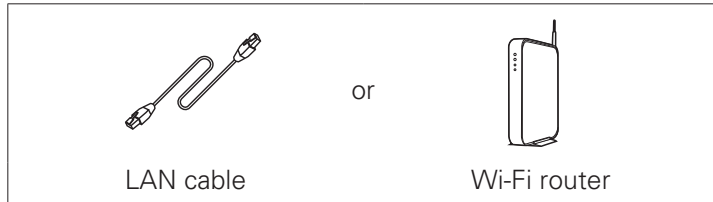

These drawings are for illustrative purposes only and may not represent the actual product(s).

Download the Denon “Hi-Fi Remote” app Scan the QR code to download and install the Denon “Hi-Fi Remote” app using your smartphone and a scanning app or manually search the Apple App store or Google Play store for the “Denon Hi-Fi Remote”




Setup Steps


There are five steps to the setup process.

- 1** Installing batteries in the remote control unit
- 2** Connect to the amplifier
- 3** Operate this unit with an iPad, iPhone or Android smartphone
- 4** Connect to the network
- 5** Enjoying your music!

1 Installing batteries in the remote control unit

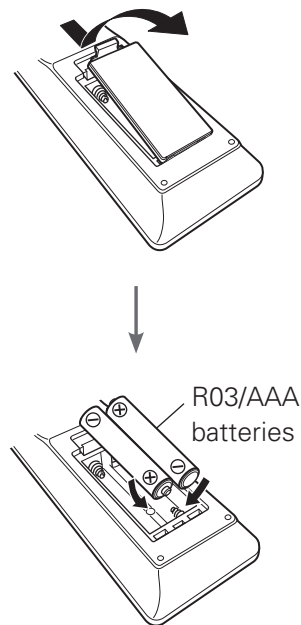


2 Connect to the amplifier

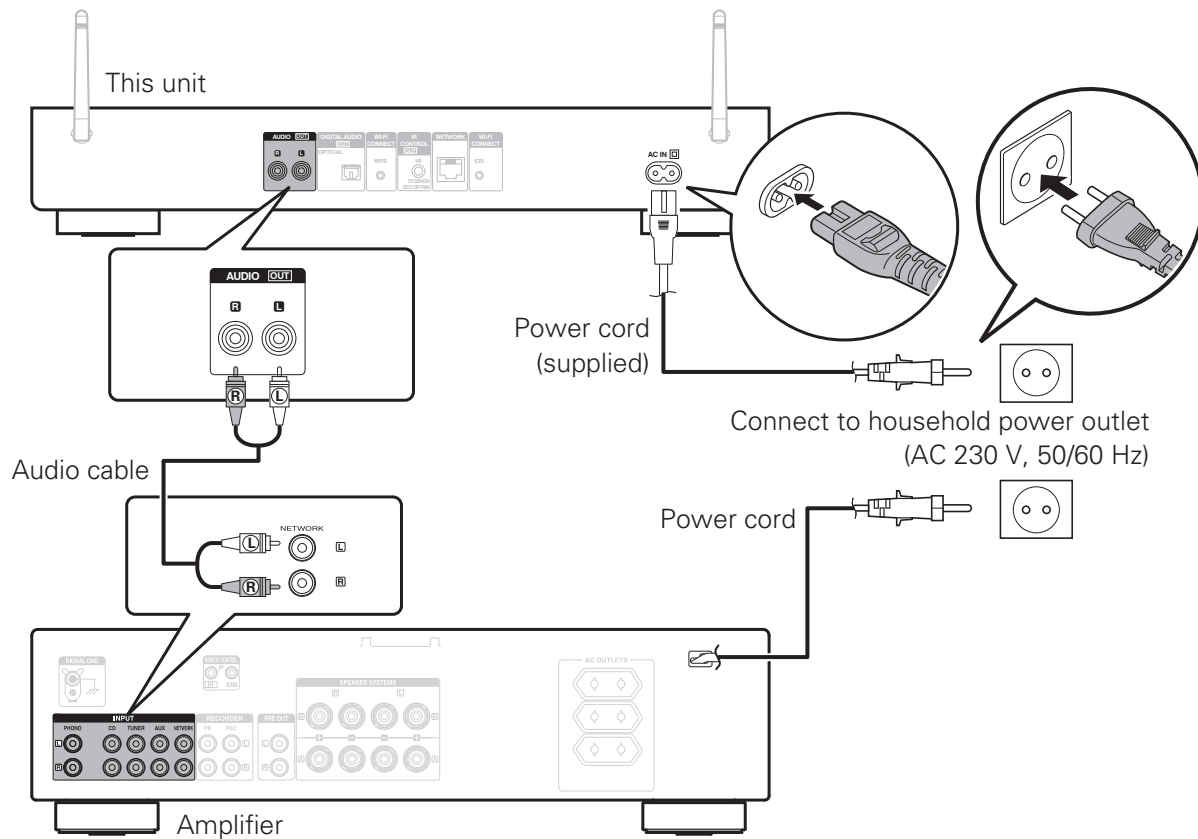

3 Operate this unit with an iPad, iPhone or Android smartphone


When this unit is connected to a Denon amplifier or CD player, the amplifier or CD player can be operated using the Denon "Hi-Fi Remote" app.

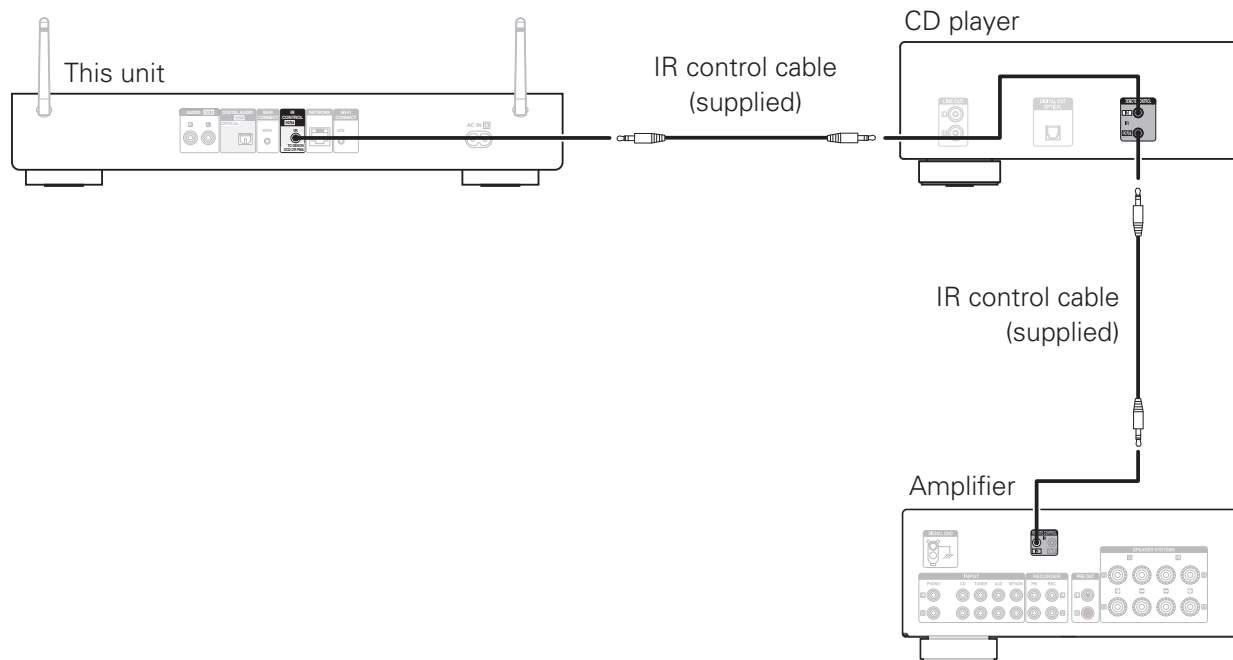

4 Connect to the network


Wired LAN

When connecting cables (wired connection), connect a LAN cable between your network audio player and your network router.

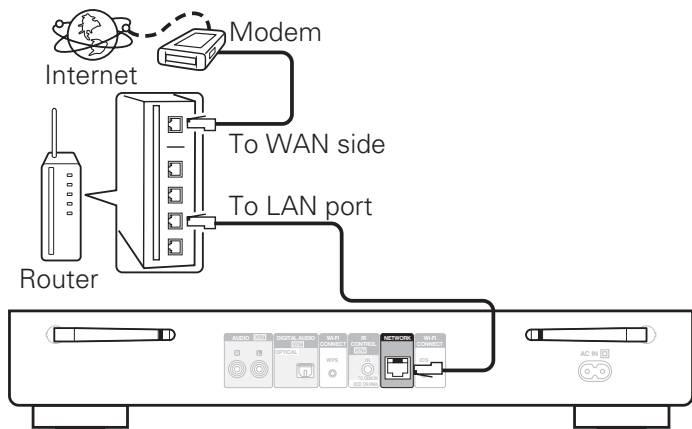

Wireless LAN


When using a wireless connection (Wi-Fi), rotate the antennas upword.

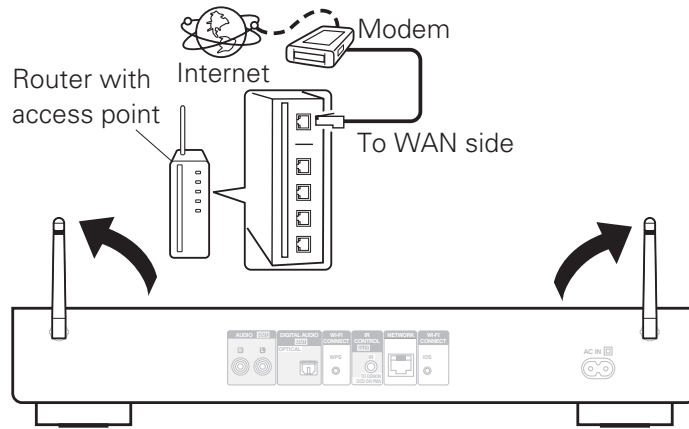


Choose from one of the following options

Wireless


iOS device
iOS version 7
or later



iOS device +
USB cable
iOS version 5
or later




No WPS router



Wi-Fi router


WPS router



Wi-Fi router


1 Power on

2 Select language

 


[Select Language]
English
select enter

3 Make sure your iOS device is connected to your WiFi Network. Select the network named "DNP-730AE" from the Settings/Wi-Fi screen on your device




3 Make sure your iOS device is connected to your WiFi Network. Connect your iOS device to the front using your USB cable.




3 Select "Wi-Fi - scan" and wait as your DNP-730AE looks for available networks

[Select Connection Method]
Wi-Fi - scan
enter cancel

 


3 Press the WPS button on your router




7

Wired



 - 1 Connect a network cable between your DNP-730AE and your router (cable not included)
- 2 Power on
- 3 Select language
- 4 Please wait while your DNP-730AE connects to your wired network.



- 4 Follow the instructions and tap Next



- 5 Please wait as completing the connection can take a few minutes
The front panel of the DNP-730AE will show the status of the connection

[Quick Setup]
Wait for the netw...

- 4 Press the iOS Button on the back of your DNP-730AE



- 5 This message will appear on your iOS device
Select "Allow"

Share Wi-Fi Settings?
Do you want to share your Wi-Fi settings so this accessory can connect to the Wi-Fi network?

Ignore Allow

Connected!

 
- 4 Select your network name.
If your network name is not listed, select "Rescan"

[Select Network]
↑ Network(WPA2-... 100%
⏮ enter ⏭ back




- 5 Enter your network password using the number keys on the remote control

[Enter Wi-Fi Password]
A B C D
G10 character type G20 a



 - 4 Within 2 minutes, press the WPS button on the back of your DNP-730AE



- 5 Please wait as completing the connection can take a few minutes
The front panel of the DNP-730AE will show the status of the connection

[Quick Setup]
Wait for the netw...
← cancel

Network Control Setting

[Network Control]
↑ On
Press ENTER to use the Denon Re

Select Network Control ON to control DNP-730AE from your smartphone, use Apple AirPlay® and maintain constant network access. Power Consumption during standby power will be slightly higher.

[Network Control]
↑ Off
Press ENTER to use low powe ...

Select Network Control OFF to reduce power consumption during standby. You can not turn on your DNP-730AE from your smartphone or use Apple AirPlay until your DNP-730AE is powered on manually and connects to your network.

5 Enjoying your music!

❑ Enjoying Internet Radio

1 Press **INTERNET RADIO**.

2 Select the item, then press **ENTER**.

3 Repeat step **2** to select the station, then press **ENTER**.



❑ Enjoying music using Apple AirPlay

1 Open Control Center (iOS 7 and later) by swiping up from the bottom of your screen, then tap AirPlay.



2 Select the “Denon DNP-730AE” from the AirPlay Device list.



Owner's Manual


Please reference to the Owner's Manual for more details about the setup and operation of the network audio player and its features.

Online Version

Enter the following URL into your web browser:
manuals.denon.com/DNP730AE/EU/EN/



Online Manual

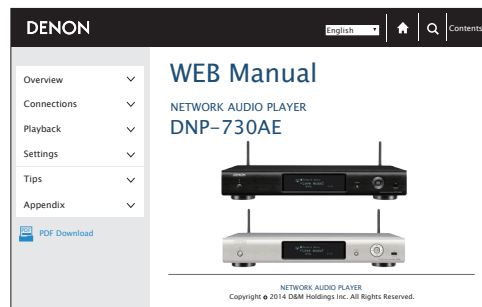


Printable Version

Access the print version of the owner's manual from the included CD-ROM or select the "PDF Download" link from the Online Version.

1

Insert the disc into your PC.

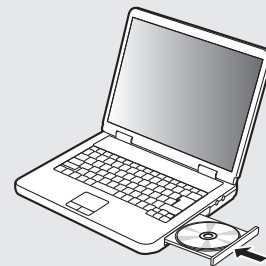

2

Follow the screen or double click on the PDF file.

DENON®

www.denon.com

D&M Holdings Inc.
Printed in China 5411 11224 00AD